


BURNING A SCREEN

1. Lay out newspapers in darkroom, closet, or windowless bathroom.
2. Prepare light sensitive emulsion and mix.
3. Use masking or painters tape to cover the edges of the screen.
3. Lay out screen on newspapers and use spoon or spatula to spread a small amount of emulsion across top of screen.
4. Use Squeegee to evenly spread emulsion on screen.
5. Let screen dry in the dark.
6. Lay printed transparency over dry emulsion.

BURNING A SCREEN

CONTINUED

7. Place screen under the clamp light with BBA bulb, position about 3 feet from light.
8. Leave screen under BBA light for 15-20 minutes until emulsion changes color.
9. Remove transparency and run screen under cold water. Image should wash out.
10. Return screen to newspapers and let screen dry completely.

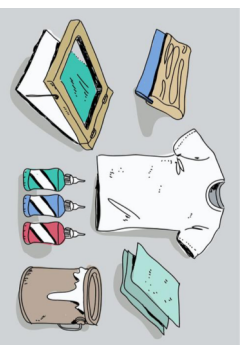

SUPPLIES FOR PRINTING



1. Burned Screen.
2. Plywood and hinge clamps.
3. Support arm (optional).
4. Fabric or acrylic paint.
5. Cardstock, tee shirts, or fabric.
5. Spoon or paint spatula.
6. Squeegee.
7. Old newspapers.
8. Masking or painters tape.
9. Clothesline and pins. Iron (optional)
10. Scrub brush.

PRINTING

1. Using hinge clamps to affix your burned screen to your plywood base.
2. Add support arm if you want.
3. Using your tape, mark the top or bottom of the image with a small margin on the plywood for aligning posters and tee-shirts.
4. For tee shirts, use a rigid piece of cardboard and tape to keep shirt from moving during printing.
5. Use spoon or spatula to spread a small amount of paint across the top of the screen.
6. Draw the squeegee over the image without putting the screen flat to flood the screen.

SUPPLIES FOR BURNING

1. Silkscreen with frame 12x9" or larger.
2. Photo emulsion and remover OR screen filler and drawing fluid.
3. Letter-sized transparency with printed design in solid black if using emulsion method.

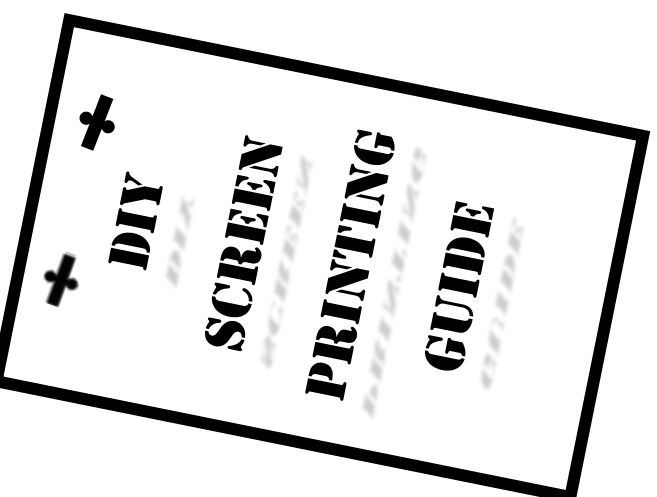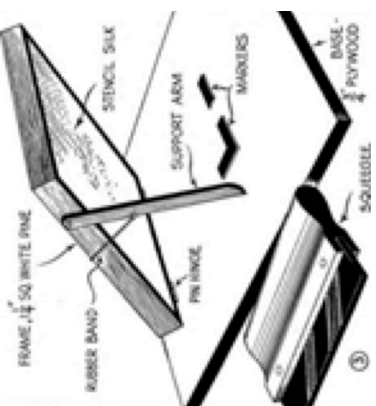

7. Once screen is flooded, use support arm (or ask a friend) to prop screen up and line up the card stock, fabric, or tee shirt on the plywood.
8. Press the screen firmly onto the surface you are printing on.
9. Draw the squeegee over the image a couple of times, adding paint as needed. Press down firmly and be sure to apply even pressure.
10. Lift the screen and remove the print. Hang on a clothesline to dry.
11. Heat treat tee-shirts, wait until entirely dry and then turn the tee inside out and apply a hot iron for 3-5 minutes.

PRINTING CONTINUED